



QUANTUM™ J-105 Quick Tune

Wind Speed		Full Turns From Base	Loos Guage Reading
0-6	Uppers	-3	25
	D2	-2	10
	D1	-1	0
6-10	Uppers	-1.5	29
	D2	-1.5	12
	D1	-0.5	2
10-14	<u>AP Sails Base Setting</u>		
	Uppers	0	34
	D2	0	17
	D1	0	4
14-18	Uppers	2	40
	D2	4	22
	D1	0.5	6
16-20	<u>Heavy Air Sails Base Settings</u>		
	Uppers	3	50
	D2	6	25
	D1	1.5	10
18-22	Uppers	4	55
	D2	7	27
	D1	1.5	10
20-24	Uppers	5	60
	D2	8	30
	D1	2	7
24+	Uppers	6	65
	D2	10	35
	D1	2	5